


Modo del uso

1. Sollevare le placchette superiori a sinistra e a destra (Fig. 1)
2. Fissare la parte destra del film, emulsione in alto, tra le due placchette di destra cautelando affinchè le perforazioni 8 o Super-8 corrispondano ai dentini. (Fig. 2)
3. Chiudere la placchetta superiore destra poi ribaltate assieme all'indietro le due placchette di destra. (Fig. 3-4)
4. Fissare in seguito, allo stesso modo, la parte sinistra del film nelle placchette di sinistra. (Fig. 5-6)
5. Aiutandovi con i raschini limare le estremità debordanti di film a sinistra e a destra. (Fig. 7)
6. Dopo aver ben pulito con un pennello le parti limate, applicare un pò di colla sulla parte sinistra precedentemente raschiata.
Attenzione! Poca colla per evitare spessore.
7. Ribaltate immediatamente assieme le due placchette di destra in modo che si aggancino nell'incollatrice. (Fig. 8)
8. Dopo circa 20 sec. rialzate le due placchette superiori e liberate il film dai dentini. (Fig. 9)


rumi splicer

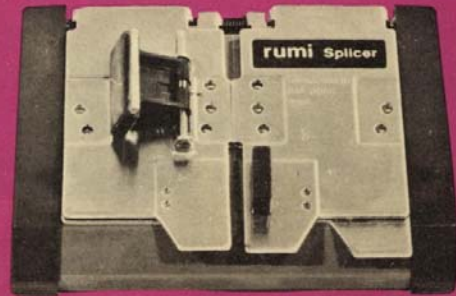

NORMAL **8** SUPER

UNIVERSAL KLEBEPRESSE
COLLEUSE UNIVERSELLE
UNIVERSAL MOVIE SPLICER
COLLATRICE UNIVERSALE

SWISS MADE PAT. PEND. INOX
RUMITAS 8102 OBERENGSTRINGEN
Switzerland

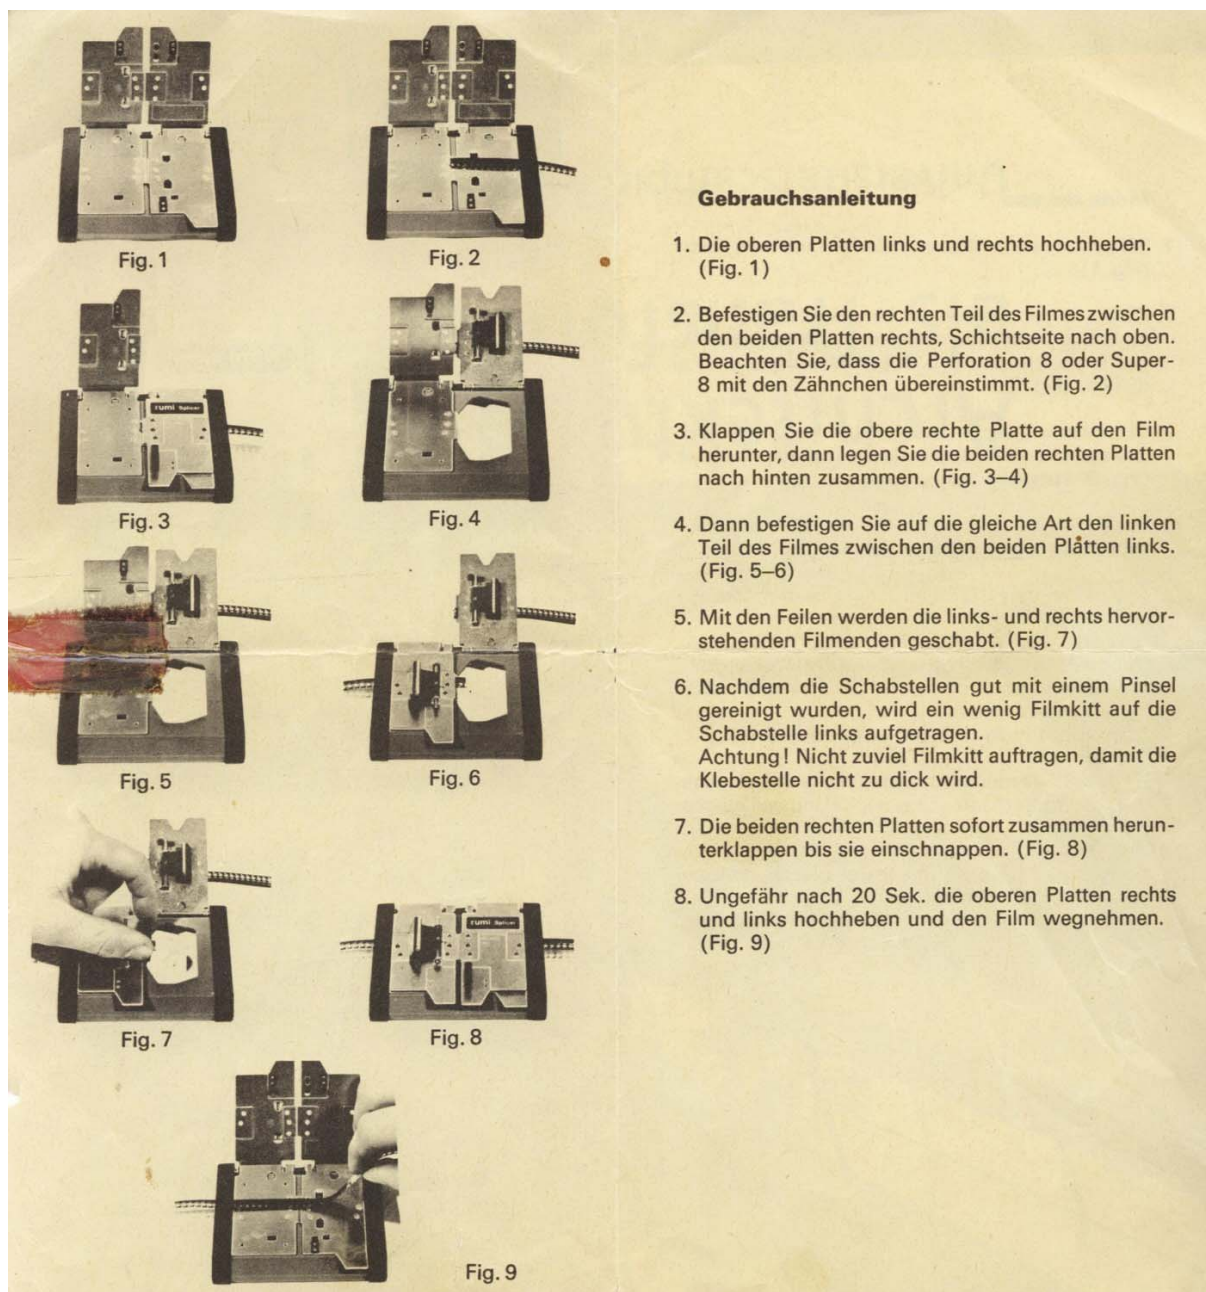

This manual has been scanned and stored by
 Mischa Koning - www.3106.net
 and may not be sold or resold without prior written agreement
 by Mischa Koning.