



PICTURE TAKING
WITH THE
No. 2-A FOLDING
CARTRIDGE PREMO
CAMERA

RAPID RECTILINEAR LENS

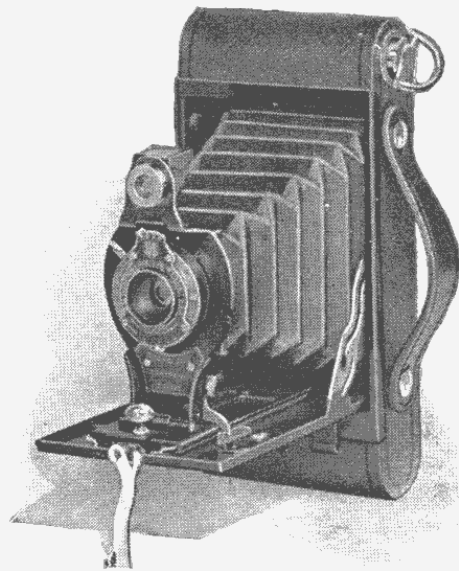

ROCHESTER OPTICAL DEPARTMENT,
EASTMAN KODAK COMPANY.
ROCHESTER, N. Y., U. S. A.

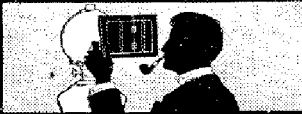

Prints by Gaslight

The best print you can get on

VELOX

is the best print you can get.

You will find many a valuable photographic pointer in the Velox Book. It's free and your dealer would be glad to give you one—or we will send it to you if you like.

NEPERA DEPARTMENT,
EASTMAN KODAK CO.,
Rochester, N. Y.

All Your Dealers.

PICTURE TAKING
WITH THE
**No. 2-A FOLDING
CARTRIDGE PREMO
CAMERA**

RAPID RECTILINEAR LENS



ROCHESTER OPTICAL DEPARTMENT,
EASTMAN KODAK COMPANY.
ROCHESTER, N. Y., U. S. A.

*Color Your Prints and
Enlargements with*

**VELOX
TRANSPARENT
WATER COLOR
STAMPS**

Anybody can use them

Book of 12 Colors, including full directions for use—only 25 cents.

EASTMAN KODAK CO.
ROCHESTER, N. Y.

All Dealers.

“KODAKERY”

A monthly magazine that teaches how to make better pictures will be sent **FREE OF CHARGE** to anyone who purchases one of our amateur cameras from a dealer in photographic goods provided this blank is filled out and sent to us within 30 days from the date the camera was purchased.

EASTMAN KODAK COMPANY.

To THE EASTMAN KODAK CO., Rochester, N. Y.

In accordance with your offer, please place my name on the mailing list for “Kodakery” (with the understanding that there is to be no cost to me) I having purchased a

TEAR OFF HERE

..... (Kind of Camera)

from (Name of Dealer)

on (Date here)

Write name and address plainly

.....

N. B. The magazine will be sent for one year only on above offer. After that the subscription price will be 50 cents per annum, but you are not under the slightest obligation to renew.—E. K. Co.

Form No. 43819.

PICTURE TAKING
WITH THE
NO. 2-A FOLDING
CARTRIDGE PREMO
CAMERA

RAPID RECTILINEAR LENS



ROCHESTER OPTICAL DEPARTMENT
EASTMAN KODAK CO.
ROCHESTER, N. Y., U. S. A.

ORDER FILM BY NUMBER

All Eastman Films may be distinguished by the Numbers on the ends of the cartons.

116

is the number for film for the camera (No. 2-A Folding Cartridge Premo). The number appears both on the carton and on the cartridge.

April, 1919

2

Before Loading

BEFORE taking any pictures with the No. 2-A Folding Cartridge Premo Camera read the following instructions carefully. Make yourself perfectly familiar with the instrument, taking especial care to learn how to operate the shutter. Work it for both time and instantaneous exposures several times before threading up the film.

The first thing for the amateur to bear in mind is that the light which serves to impress the photographic image upon the sensitive film in a fraction of a second when it comes through the lens, can destroy the film as quickly as it makes the picture. Throughout all the operations of loading and unloading, be extremely careful to keep the duplex paper wound tightly around the film to prevent the admission of light.

3

CONTENTS

- PART I—Loading
 PART II—Making the Exposures
 PART III—Removing the Film

PART I

Loading the Camera

THE film for the No. 2-A Folding Cartridge Premo Camera, is furnished in light-proof cartridges and the instrument can, therefore, be loaded in daylight. The operation should, however, be performed in a subdued light, not in the glare of bright sunlight. It should also be borne in mind that after the seal is broken care must be taken to keep the duplex paper taut on the spool, otherwise it may slip and loosen sufficiently to fog the film.



The Film, No. 118

1. To load the camera, take a position where the daylight is somewhat subdued and

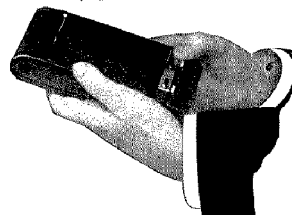


FIG. 1

remove front of camera by pushing metal lock to the left, Fig. 1. Grasp the front of

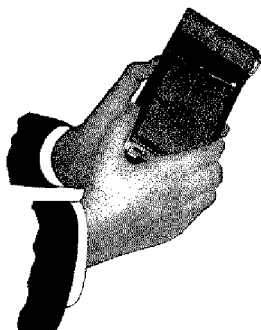


FIG. 2

camera by the two metal edges and lift it upwards, first lifting that end on which the lock is fastened, and remove entirely that part of the camera. Fig. 2. The camera is now ready for loading.

2. At each end of the camera will be seen a

recess for holding the film spools.

As sent out from the factory, there is one empty

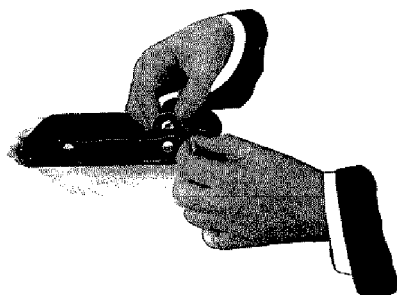


FIG. 3

spool at the winding end of the camera, and the fresh cartridge is to be inserted in the opposite end.

The empty spool, which is used as the reel, must now be removed. This may be done by first pulling out the winding key to limit of motion, which will release the spool, and it can then be readily removed. Fig. 3.

3. Remove the gummed slip that holds the end of duplex paper, from the cartridge, and thread tapered end of duplex paper into the slot of the empty spool, so that the slit in the end of spool will be at the top, while at the same time the slit at end of full spool will be at the bottom of the cartridge. Then give the empty spool three or four turns, or until the black lines on outside of paper are reached, at the same time being careful that the paper draws straight and true. See Fig. 4.

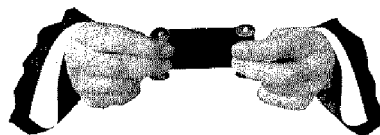


FIG. 4

4. The camera may now be loaded by first unrolling about four inches of the duplex paper and then placing the two spools into the film pockets at each end of the instrument. Fig. 5.

Important

Be sure and get the top of spool at top of camera (each spool is marked, with the word



FIG. 5

"top" which is printed on the duplex paper near the top of the spool) when inserting, otherwise your film will come on the wrong side of duplex paper when reeled off and total failure will result.

5. After spools have been placed into the pockets, push both as far back as possible in order that the tension springs may hold them securely in place, creating sufficient drag to draw the film taut, and afford perfect register of the focal plane.

Turn winding key at top of camera toward the front, until the web on the key engages in slit in top of spool. Fig. 6.

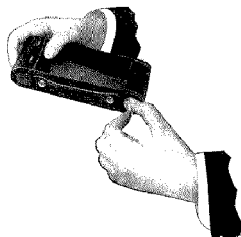


FIG. 6

Caution.

If you turn off too much of the duplex paper before the camera is closed, the film will be uncovered and ruined.

6. The camera is now to be closed, reversing the operation shown in Figs. 1 and 2. When replacing front of camera after it is loaded, first insert the end opposite the lock, the edge of box should be in the metal groove at end of front, then drop the end on which the lock is fastened down into place. Make sure that the metal lock is fastened securely.

Throughout the foregoing operations, from the time the gummed slip is cut on the fresh roll of film until the camera is closed, keep the duplex paper wound tightly on the roll. If it is allowed to loosen, light will be admitted and the film fogged.

7. The roll of film in the camera is covered with duplex paper and this must be partly reeled off before a picture can be taken. Turn the key slowly to the left and watch in the little red window at the back of the camera. When ten to twelve turns have been given, a black index hand will appear before the little red window. This hand is a warning that you are approaching Fig. 1. Then turn the key very slowly until Fig. 1 appears exactly in the center of the red window. Fig. 7.



FIG. 7

The film is now in position for taking the first picture.

PART II

Making the Exposure

Before making the exposure with the No. 2-A Folding Cartridge Premo, either time or instantaneous, be sure of four things:

FIRST—That the shutter is set properly.

(For time, instantaneous or bulb exposures as desired.)

SECOND—That the diaphragm stop is set at the proper opening.

THIRD—That the camera is focused.


FOURTH—That an unexposed section of the film is turned into position.

SECTION 1

Operating the Shutter

Perfect familiarity with the shutter is essential to successful picture taking with any camera.

The following directions should, therefore, be carefully read and the shutter operated several times before threading the film up for use.

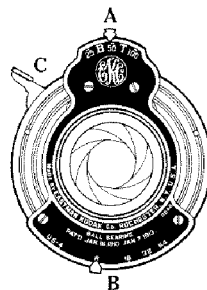

"Snap Shots"

For all Ordinary Instantaneous Exposures.

FIRST—Set the indicator A at 25, 50 or 100. This adjusts the shutter for instantaneous exposures of approximately 1-25, 1-50 and 1-100 of a second.

NOTE—In bright light set the lever at 100, the highest speed. In more subdued lights set at 50 or 25, but do not attempt to make any instantaneous exposures in very dull light.

SECOND—Set the indicator B at No. 8. Lever B controls the Iris diaphragm and No. 8 is the proper opening for ordinary instantaneous exposures.

THIRD—Press down on lever C and release it. This makes the exposure.

Time Exposures

FIRST—Set the lever A at the point T (time). This adjusts the shutter for time exposures.

SECOND—Set the lever B at No. 4, 8, 16, 32 or 64. See instructions for use of stops, page 29.

THIRD—Press down on lever C. This opens the shutter. Time exposure by a watch. Again press the lever. This closes the shutter.

Bulb Exposure

When it is desirable to make a very short time exposure this is best accomplished by making a "bulb exposure."

FIRST—Set the indicator A at the point "B" (bulb). This adjusts the shutter for bulb exposures.

SECOND—Set the indicator B controlling the stops at No. 4, 8, 16, 32 or 64.

See instructions for use of stops, page 29.

THIRD—Press lever to open the shutter, and release it to close the shutter. This makes the exposure. The shutter will remain open as long as the lever is under pressure.

IMPORTANT—Never oil shutter. In case of accident, return Camera to your dealer or to us for repairs.

SECTION 2

Instantaneous Exposures

("Snap Shots.")

In taking instantaneous exposures, the object should be in the broad, open sunlight, but the

12

camera should not. The sun should be behind the back or over the shoulder of the operator. If it shines directly into the lens it will blur and fog the picture.

Use Stop No. 8

For all ordinary outdoor work, when the sun is very bright, use stop No. 8. If a smaller stop is used, the light will be so much reduced that it will not sufficiently impress the image on the film, and failure will result.

In views on the water when the sunlight is unusually strong and there are no heavy shadows, diaphragm No. 16 may be used.

If a smaller stop opening than No. 16 be used for snapshots, except for extremely distant views, snow scenes or clouds, absolute failure will result.

Focus on the Subject

1. Pull up the lever on front of camera, located at the winding end. Fig. 1. This unlocks the bed of camera. Then pull lever forward and pull down the bed of camera to the limit of motion.

2. Grasp the round post on slide plate to pull out the front.

3. At the front of camera bed and at one side will be found an index plate which is used for focusing the camera. There are three slots on the index plate, marked 8, 25 and 100 feet. It is not necessary to estimate the distance with any more than approximate accuracy; for instance, if the focus is set at the slot marked

13

25 feet, (the usual distance for ordinary street work) everything from 12 feet to about 50 feet will be in good focus. When the camera is focused in this manner, it may then be used as a regular fixed focus instrument, providing the stop indicator is placed midway between No. 8 and No. 16. Where the principal object is nearer or farther, the focus should be changed ac-

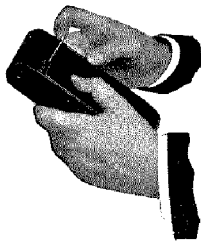


FIG. 1. Opening the front.

ordingly. For distant views set the focus with the indicator over the division marked 100 feet, and nothing nearer than 8 feet can be focused without using a portrait attachment. See page 27.

Extending the Front

Now extend front of camera to the division marked for the distance desired, 8, 25 or 100 feet, and the camera will be in focus for the distance at which you have placed the catch. (Fig. 2).

14

NOTE: The index plate is scaled for both feet and meters and care should be taken not to confound them.

The catch or locking device is on the left side at the bottom of front board, and to set the focus,

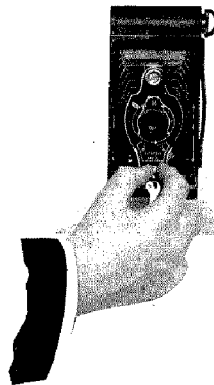


FIG. 2. Extending the Front

press the lever, then pull out front of camera to the division marked for the distance desired.

How to Use the No. 2-A Folding Cartridge Preme as a Fixed Focus Camera

Set focus at 25 feet.

Use speed of 1-25 of a second.

Set diaphragm midway between Nos. 8 and 16.

15

By following the above suggestions this camera can be used as a fixed focus instrument with the additional advantage of being instantly convertible to a focusing camera when conditions call for it. It must be remembered however, that when using this camera as a fixed focus type, it is necessary that the subject be in brilliant sunlight, in order to obtain a fully timed exposure.

Explanation

A lens is often spoken of erroneously as having a fixed focus.

There is no such thing as a fixed focus lens, but in certain cameras, $3\frac{1}{4} \times 4\frac{1}{4}$ and smaller (equipped with short focus lenses) the lens is immovable, i. e., set at a distance that is a compromise, as to its focus, between far and near points. A camera with a lens so focused, used in combination with a relatively small stop, is designated a fixed focus instrument.

Making the Exposure

Aim the camera at the object to be photographed and locate the image in the finder, which is placed just above the shutter.

The finder shows the scope of view and gives a fac-simile of what the picture will be. Hold the camera steady—hold it level as shown in Fig. 3, and push the lever. This makes the exposure.

16

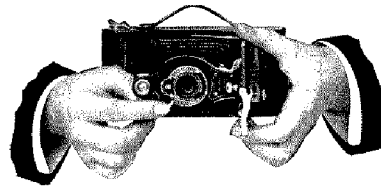


FIG. 3. Pressing the Snap Shot Lever.

For a vertical exposure the camera must be held on its end. Fig. 4. The finder is reversible


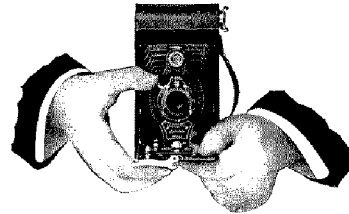


FIG. 4

so that it will be correct for either horizontal or vertical exposures. The finder gives the scope of view and shows a fac-simile of the picture as it will appear, but on a reduced scale. Any object that does not show in the finder will not show in the picture.

17

It will be noticed that the top of the finder is notched as shown in Fig. 5. This is done so that the one finder will correctly show the view included when the camera is held in either horizontal or vertical position. As the picture taken with the No. 2A Folding Cartridge Premo is oblong it will readily be seen that unless the

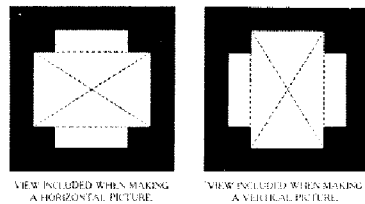

VIEW INCLUDED WHEN MAKING A HORIZONTAL PICTURE.

VIEW INCLUDED WHEN MAKING A VERTICAL PICTURE.

FIG. 5

finder was made in this manner it could not correctly show the exact view intended when held in either position.

Remember, that only the view indicated in the dotted lines will show in the picture.

18

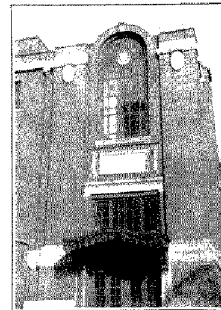


FIG. 6

Hold it Level!

The camera must be held level.

If the operator attempts to photograph a tall building while standing near it, by pointing the camera upward (thinking thereby to center it) the result will be similar to Fig. 6.

This was pointed too high. This building should have been taken from the building opposite and at a level corresponding with the middle of the subject.

The operator should hold the camera level, after withdrawing to a proper distance, as indicated by the image shown in the finder.

If the object be down low, like a small child or a dog, the camera should be held down level with the center of the object.

19



Important
Making Instantaneous Exposures
 Hold the instrument firmly against the body as shown in illustrations, and when



operating the cable release (when camera is equipped with same) or pressing the exposure lever, hold the breath for the instant.

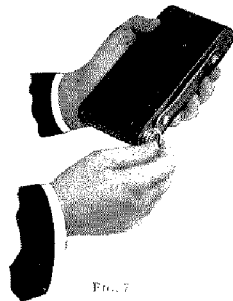


FIG. 7

TURN A NEW SECTION OF FILM INTO POSITION. Turn the key in top of camera slowly to the left, until the next number appears before the red window. Three or four turns will be sufficient to accomplish this. The warning hand appears only before No. 1. See Fig. 7.
 Repeat the foregoing operation for each picture.


SECTION 3

Time Exposures—Interiors


1. Place the camera in position on a tripod, or some other firm support. If a table or chair is used, be sure to place the Camera not more than two or three inches from the edge so as to avoid including part of same in the picture.

PICTURE TAKING
 WITH THE
**No. 2-A FOLDING
 CARTRIDGE PREMO
 CAMERA**

RAPID RECTILINEAR LENS

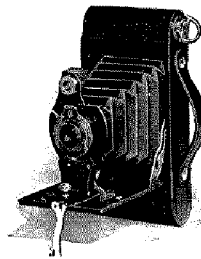

ROCHESTER OPTICAL DEPARTMENT,
EASTMAN KODAK COMPANY,
 ROCHESTER, N. Y., U. S. A.



Prints by Gaslight

The best print you can get on

VELOX

is the best print you can get.

You will find many a valuable photographic pointer in the Velox Book. It's free and your dealer would be glad to give you one—or we will send it to you if you like.

NEPERA DEPARTMENT,
EASTMAN KODAK CO.,
Rochester, N. Y.

At Your Dealers.

Set camera in such a position that the finder will embrace the view desired. The diagram shows the proper position for the camera.

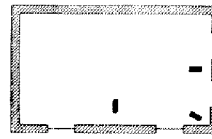


Diagram showing positions of Camera

It should not be pointed directly at a window as the glare of light will blur the picture. If all the windows cannot be avoided, pull down the shades of such as come within the range of the camera.

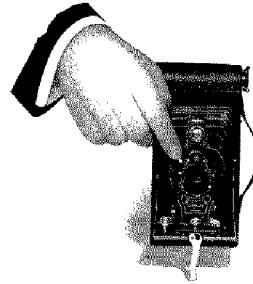


FIG. 1

Fig. 1 shows the Camera in position for a

23

vertical exposure. The Camera is also provided with tripod sockets and may be used on a tripod.

When it is desired to make a horizontal time exposure without the use of a tripod, pull down the same lever at front of bed of Camera, that was used for the support when taking a vertical exposure, as shown in Fig. 2.

Adjust the shutter for a time exposure, as described on page 12.

All being in readiness, press the lever, once to open and again to close the shutter. Time the exposure by a watch.

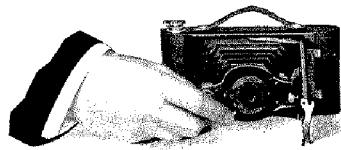


FIG. 2

Another Method

Another way of making short-time exposures which has much to recommend it is as follows:

Hold the palm of the hand before the front of the Camera, so as to cover the lens and exclude all light (See Fig. 3). Press the release to open the shutter; remove the hand and give the proper exposure; replace the hand in front of the lens and again press the release to close shutter.

24

Some experienced amateurs prefer this method with any camera not having a pneumatic or cable release, as it practically does away with all danger of jarring the instrument during exposure, and thus blurring the picture.

TURN THE KEY.

Turn a new film into position, as described before (See page 22).

The camera is now ready for the next Interior Exposure.

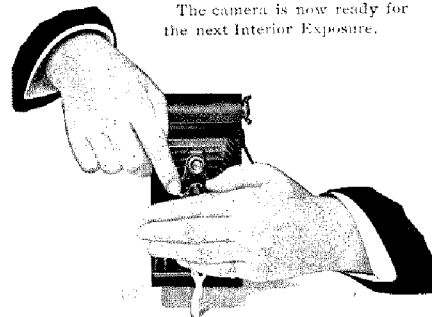


FIG. 3

Follow the directions given heretofore for each successive exposure.

When the last Interior Exposure is made, adjust the shutter for instantaneous exposures as before directed.

25

Time Needed for Interior Exposures

The following table gives the time of the exposure required under varying conditions of light.

The time given in the table is with stop No. 16 in the lens. If stop No. 8 is used give only one-half the time; if stop No. 64 is used, give four times the time of the table. The smaller the stop the sharper the picture. The No. 16 gives the best results for interiors.

White walls and more than one window:

bright sun outside, 4 seconds;
hazy sun, 10 seconds;
cloudy bright, 20 seconds;
cloudy dull, 40 seconds.

White walls and only one window:

bright sun outside, 6 seconds;
hazy sun, 15 seconds;
cloudy bright, 30 seconds;
cloudy dull, 60 seconds.

Medium colored walls and hangings and more than one window:

bright sun outside, 8 seconds;
hazy sun, 20 seconds;
cloudy bright, 40 seconds;
cloudy dull, 80 seconds.

Medium colored walls and hangings and only one window:

bright sun outside, 12 seconds;
hazy sun, 30 seconds;
cloudy bright, 60 seconds;
cloudy dull, 120 seconds.

26

Dark colored walls and hangings and more than one window:

bright sun outside, 20 seconds;
hazy sun, 40 seconds;
cloudy bright, 80 seconds;
cloudy dull, 2 minutes, 40 seconds.

Dark colored walls and hangings and only one window:

bright sun outside, 40 seconds;
hazy sun, 80 seconds;
cloudy bright, 2 minutes, 40 seconds;
cloudy dull, 5 minutes, 20 seconds.

The foregoing is calculated for rooms whose windows get the direct light from the sky, and for hours from three hours after sunrise until three hours before sunset.

If earlier or later the time required will be longer.

To Make a Portrait

Place the sitter in a chair partly facing the Camera (which should be located slightly higher than an ordinary table) and turn the face slightly towards the instrument, having the eyes centered on an object at the same level with the lens. Center the image in the finder. For a three-quarter figure the Camera should be 8 feet from the figure. The background should form a contrast with the sitter.

Kodak Portrait Attachment

The attachment is simply an extra lens slipped on over the regular lens, and in no way affects its operation except to change the focus.

27

Use Kodak Portrait attachment No. 3, with the No. 2-A Folding Cartridge Premo Camera.

By means of the Portrait Attachment, large head and shoulders portraits of various sizes may be obtained.

When the Attachment is in position and the Camera set:

At 8 feet focus, the subject should be placed exactly 3 feet from the lens.

At 25 feet focus, place the subject 4 feet from the lens.

At 100 feet focus, place the subject 4½ feet from the lens.

Time Exposures in the Open Air

When the smallest stop is in the lens the light admitted is so much reduced that time exposures out of doors may be made the same as interiors, but the exposures must be much shorter.

WITH SUNSHINE—1-5 second.

WITH LIGHT CLOUDS—From ¼ to 1 second will be sufficient.

WITH HEAVY CLOUDS—From 2 seconds to 5 seconds will be required.

The above is calculated for the same hours as mentioned above and for objects in the open air. For other hours or for objects in the shadow, under porches or under trees, no accurate directions can be given; experience only can teach the proper exposure to give.

28

Time exposures cannot be made while the Camera is held in the hand. Always place it upon some firm support, such as a tripod, chair or table.

For exceedingly short time exposures as just described use the "bulb exposure." See page 12.

Diaphragms

No. 4—For instantaneous exposures on slightly cloudy days.

No. 8—For all ordinary instantaneous exposures when the sun shines.

No. 16—For instantaneous exposures when the sunlight is unusually strong and there are no heavy shadows, such as in views on the seashore, or on the water, also for interior time exposures, the time for which is given in the table on page 26.

No. 32—For interiors. Never for instantaneous exposures, except for extremely distant views and snow scenes.

No. 64—For time exposures outdoors in cloudy weather. Never for instantaneous exposures, except for clouds only. The time required for time exposures on cloudy days with smallest stop will range from 1-5 second to 5 seconds, according to the light. The smaller the stop the sharper the picture.

Absolute failure will be the result if you use the smallest stop for ordinary instantaneous exposures.

Flash Light Pictures

By the introduction of Eastman Flash Sheets, picture taking at night has been wonderfully simplified. A package of flash sheets, a piece of cardboard, a pin and a match complete the list of essential extras, although a Kodak Flash Sheet Holder is a great convenience.

29

With flash sheets, no lamp is necessary; there is a minimum of smoke and they are far safer than any other self-burning flash medium, besides giving a softer light that is less trying to the eyes.

Many interiors can be taken with the flash sheets that are impracticable by daylight, either by reason of a lack of illumination or because there are windows in a direct line of view which cannot be darkened sufficiently to prevent the blurring of the picture.

Evening parties, groups around a dinner or card table or single portraits may be readily made by the use of our flash sheets, thus enabling the amateur to obtain souvenirs of many occasions which, but for the flashlight, would be quite beyond the range of the art.

PREPARATION FOR THE FLASH.—The camera should be prepared for time exposures, as directed on page 22 of this manual (except that stop No. 8 must be used), and placed on some level support where it will take in the view desired.

Pin a flash sheet by one corner to a piece of cardboard which has previously been fixed in a perpendicular position. If the cardboard is white it will act as a reflector and increase the strength of the flash.

The flash sheet should *always* be placed two feet behind and two or three feet to one side of the camera. If placed in front, or on a line with front of camera the flash would strike the lens and blur the picture. It should be placed at one side as well as behind, so as to throw a shadow

and give a little relief in the lighting. The flash should be at the same height or a little higher than the camera. The support upon which the flash is to be made should not project far enough in front of it to cast a shadow in front of the camera. An extra piece of cardboard a foot square placed under the flash sheet will prevent any sparks from the flash doing damage. However, by using the Kodak Flash Sheet Holder, all these contingencies are taken care of, and we strongly advise its use.

The Kodak Flash Sheet Holder

This holder may be held in the hand, *always between you and the flash sheet*. Or, it may be used on any Kodak tripod, being provided with a socket for this purpose. The sheet is placed in position in the center of the larger pan over the round opening which has a raised saw-tooth edge extending half way around it. Press with the thumb on the sheet, so slight break is made and a portion of the sheet projects partially through the opening. Then to insure the sheet being more securely fastened,



press around the notched edge, forcing this portion of the flash sheet firmly into position on the pan.

Then to set off the flash, merely insert a lighted match, from behind, through the round opening.

Taking the Picture

Having the Camera and the flash sheet both in position and all being in readiness, open the camera shutter, stand at arm's length and touch a match from behind, through the opening in the center of the holder.

NOTE—If you are not using the Kodak Flash Sheet Holder place the match in a split stick at least 2 feet long.

There will be a bright flash which will impress the picture on the sensitive film. Then push the lever to close the shutter and turn a fresh film into place with the key, ready for another picture.

The Flash Sheet

The size of the sheet required to light a room varies with the distance of the object farthest from the camera, and the color of the walls and hangings.

TABLE

For ten feet distance and light walls and hangings, use one No. 1 sheet.

For ten feet distance and dark walls and hangings, use one No. 2 sheet.

For fifteen feet distance and light walls and hangings, use one No. 2 sheet.

For fifteen feet distance and dark walls and hangings, use one No. 3 sheet.

NOTE—Never use more than one sheet at a time, in the Kodak Flash Sheet Holder.

TO MAKE A PORTRAIT—Place the sitter in a chair partly facing the Camera (which should be located slightly higher than an ordinary table) and turn the face slightly towards the instrument having the eyes centered on an object at the

same level with the lens. The proper distance from the camera to the subject can be ascertained by looking at the image in the finder. For a three-quarter picture this will be from 6 to 8 feet, and for a full figure from 8 to 10 feet.

For using Portrait Attachment, see page 27.

The flash should be on the side of the camera away from the face, that is, the sitter should not face it. The flash should not be higher than the head of the sitter.

TO MAKE A GROUP.—Arrange the chairs in the form of an arc, facing the Camera so that each chair will be exactly the same distance from the Camera. Half the persons composing the group should be seated and the rest should stand behind the chairs. If the group is large any number of chairs may be used, but none of the subjects should be seated on the floor, as sometimes seen in large pictures, because the perspective would be too violent.

BACKGROUNDS.—In making single portraits or groups, care should be taken to have a suitable background against which the figures will show in relief; a light background is better than a dark one, and often a single figure or two will show up well against a lace curtain. For larger groups a medium light wall will be suitable.

The *finder* on the camera will aid the operator in composing the groups so as to get the best effect. In order to make the image visible in the finder the room will have to be well lighted with

ordinary lamplight, which may be left on while the picture is being made, provided none of the lights are placed so that they show in the finder.

Eastman Flash Sheets burn more slowly than flash powders, producing a much softer light and are, therefore, far preferable in portrait work. The subject, however, should be warned not to move, as the picture is not taken *instantaneously*, about one second being required to burn one sheet.

Eastman Flash Cartridges

Eastman Flash Cartridges may be substituted for the sheets if desired. We recommend the sheets, however, as more convenient, cheaper and capable of producing the best results. The cartridges are only superior when absolutely instantaneous work is essential.

Closing the Camera

1. To disengage front from lock on focusing scale so that it may be pushed back, press in with finger on catch which is located just above the focusing scale.
2. Keep catch pressed and slide back front a short distance. The catch may then be released and front pushed back into the camera box. Reverse the operation as shown in Fig. 2, page 15.
3. Close front by pressing down on arm locks on each side of bed as shown in Fig. 1. The bed will now close readily.

34

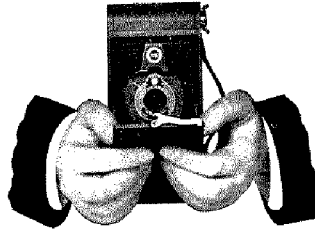


FIG. 1

Caution

Before closing the bed of the camera be careful to note that the finder is in the upright position, and that the front board has been pushed back to the limit of motion.

If they are in proper position they will not interfere with the bed in closing.

35

PART III

Removing the Film

No dark room is required in changing the spools in the Cartridge Premo Camera.

The operation can be performed in the open air but to avoid all liability of fogging the edges of the film it had best be performed in a subdued light.

1. When the last film has been exposed give the key a dozen extra turns. This covers the film with duplex paper again.

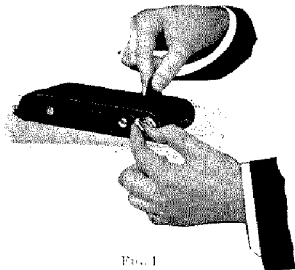


FIG. 1

Showing how duplex paper leaves reel

2. Provide an extra spool of film to fit this camera and take a position as far as possible from any window or where the light is subdued.

36

3. Remove front of Camera as described on page 5.

4. Holding the paper taut so as to wind tightly turn the key until paper is all on reel. See Fig. 1.

5. Hold ends of duplex paper and sticker together, to prevent paper from loosening on reel. If sticker folds under reel when wound pull it up with the point of a lead pencil.

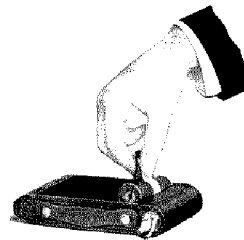


FIG. 2

6. Pull out winding key, and lift out roll of film as shown in Fig. 2.

7. Fold over half inch at end of duplex paper (so as to make subsequent breaking of the seal easy) and then seal with sticker.

8. Wrap up exposed film immediately to prevent the possibility of light being admitted.

37

9. Now remove empty spool and load as described in Part 1.

The roll is now ready for developing and printing.

IMPORTANT

Film should be developed as promptly as possible after exposure.

The quality of the image on all sensitized products is retained by immediate development after exposure.

*Load Your Camera with Eastman Film
Look for this trade mark on the box*



"Cinch Marks"

If the film and paper loosen up a trifle when taken from the camera, many amateurs are likely to take the cartridge in the hand and wind it as closely as possible, "cinching" it tightly with a twisting motion. There's nothing more likely to injure the negative than this tight drawing of the film, as it abrades the surface, making fine parallel scratches running lengthwise of the film,

38

which, in some cases, will ruin the negative. Do not "cinch" the cartridge. It simply needs to be wound tightly enough so that the duplex paper keeps inside the flanges.

Keep Dust Out of the Camera

Defective negatives are often caused by particles of dust which have collected on the inside of the camera and settle upon the film in particles that produce small dark spots upon the prints.

It is therefore well to wipe out the inside of camera and bellows occasionally with a slightly damp cloth. In summer weather or after the camera has remained idle for any length of time, this needs special attention.

Clean Lenses

Dirty or dusty lenses are frequently the cause of photographic failures. These pictures illustrate




CLEAN LENS

this point clearly. The sharp, full timed picture on this page was taken with the lens clean and in good order. To produce the effect shown in the picture on the next page the operator lightly touched the face of the lens with his thumb, which was slightly damp with perspiration.

39

Lenses should be frequently examined by looking through them and if found to be dirty, should be wiped, both front and back, with a clean, soft linen handkerchief. It is well also to occasionally wipe out the inside of camera with a slightly damp cloth. In summer weather this needs special attention. Large spots of dust or dirt on the lens will cause defects in the picture, while if the lens is evenly covered with a film of dust, dirt or moisture, the effect will be to cut off a great deal of light and make the picture undertimed.

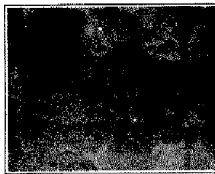

DIRTY LENS

Finishing the Pictures

There are two distinct steps in the making of photographs — the picture taking and the picture finishing. In order to free our instruction books from all unnecessary details, which might be confusing, we furnish with the camera directions for picture taking only.

The instructions in this little book are ample for the manipulation of the camera under every condition that the amateur is likely to encounter. Similarly, those who wish to do their own developing and printing will find equally full instructions accompanying the Kodak Film Tanks (for developing in daylight) or our outfits for dark-room use.

40

For use with the No. 2-A Folding Cartridge Premo Camera Film (No. 116), provide preferably a 2½ inch Kodak Film Tank. (These films may be developed in the larger tanks, but not so economically).

If the dark-room method of developing is preferred, an Eastman A B C Developing and Printing Outfit should be provided.

In keeping with our plan and purpose to provide the users of our cameras with every help in the production of good pictures, we will be glad to furnish such developing and printing instructions whether a tank or outfit is purchased or not.

With the Kodak Film Tank and Velox paper many amateurs find as great pleasure in the finishing of the pictures as in the taking of them, and are able to produce, by the simple methods we have perfected, work of the highest order.

We never lose interest in the purchaser of a Premo. We are not only willing but are anxious at all times to help solve any problems that he may encounter, either by sending on the necessary printed instructions or by individual correspondence. Such customer, in availing himself of the knowledge of our experts, puts himself under no obligation to us. He is simply availing himself of one of the things that he is entitled to when he buys a Premo or a Kodak—and that is Kodak service.

ROCHESTER OPTICAL DEPARTMENT
EASTMAN KODAK CO.
Rochester, N. Y.

41

PRICE LIST

Carrying case for the No. 2-A Folding Cartridge Premo Camera,	\$1 50
Kodak Portrait Attachment No. 3 for use with No. 2-A Folding Cartridge Premo Camera,	50
Kodak Color Filter, No. 3	75
Kodak Sky Filter, No. 3	75
Eastman Film Cartridge, No. 116, 12 Exposures, 2½ x 4¼	52
Do., 6 exposures	26
Kodak Film Tank 2½ inch	4 00
Duplicating Outfit for same	2 00
Kodak Tank Developer Powders for 2½ or 3½ inch Tank, per pkg. ½ doz	20
Kodak Acid Fixing Powder, 1 lb. pkg	25
Do., ½ lb. pkg.	15
Do., ¼ lb. pkg.	10
Velox Paper, per dozen 2½ x 4¼	12
Velox Transparent Water Color Stamps	25
Velox Transparent Water Color Stamp Outfit, consisting of Artist's Mixing Palette, three special Camel's Hair Brushes, and one book of Velox Transparent Water Color Stamps, (12 colors)	75

NOTE—Prices subject to change without notice.

Nepera Solution, for developing Velox, 4 ounce bottle	\$ 28
Eastman Reducer, pkg., 5 tubes	50
Velox Re-developer, per 4 oz. pkg	50
Solio Paper, 2½ x 4¼, per pkg., 2 dozen	20
Eastman Printing Masks No. 4, for use with No. 2-A Folding Cartridge Premo Negatives, each	06
Combined Toning and Fixing Solution for Solio, per 8 ounce bottle	50
Do., 4 ounce bottle	30
Packed in mailing case, postpaid, 20c. additional	
Eastman Pyro and Special Developer Powders, in sealed glass tubes, per box of five tubes	25
Do., Hydrochinon Developer Powders, five tubes	35
Eastman Pyro Developer Powders, per ½ doz.	25
Glass Stirring Rod Thermometer	1 00
Kodak Dark Room Lamp, No. 2, ¾ inch wick	1 00
Eastman Flash Sheets, No. 1 per package ½ dozen	35
Do., No. 2 per package of ½ doz.	56
Do., No. 3 per package of ½ doz.	84
Kodak Flash Sheet Holder	1 00
Eastman Film Developing Clips, (nickel) 3½ inch, per pair	25

NOTE—Prices subject to change without notice.

Kodak Developing Clips, (wooden), 5 inch, per pair	\$ 20
Kodak Junior Film Clips, No. 1, each	12
Kodak Trimming Board, 5 inch	50
Transparent Trimming Gauge for above	35
No. 0, Kodak Metal Tripod	2 75
Leatherette Carrying Case for above Tripod	1 00
Bulls-Eye Tripod	2 00
Flexo Tripod	1 25
Eastman Film Negative Album, to hold 100 2½ x 4¼ Negatives	75
Kodak Dry Mounting Tissue, 3 doz. package, 2½ x 4¼	10
Eastman Photo Blotter Book for blotting and drying prints	40
Baltic Mounts for prints, 2½ x 4¼, per 100	2 20
Do., per 50	1 10
Agrippa Album, flexible leather cover, loose-leaf, 50 black linen finish leaves, size 7 x 11	2 50
Forum Album, 25 Black or Sepia leaves, size 7 x 10	90
Kodak Print Roller, double, 6 inch.	90
Flexo Print Roller, single, 4 inch	25
Developing Film only, 2½ x 4¼ per roll, 12 exposures	35
Do., per roll of 6 exposures	20
Printing and mounting only, on Velox, 2½ x 4¼, each	09

NOTE—Prices subject to change without notice.

Do., prints unmounted, each	\$ 07
All prints furnished unmounted unless otherwise specified	

NOTE—In mailing us film for development do not fail to mark the package plainly with your name and address, and write us a letter of advice, with remittance.

8 x 10 Bromide Enlargements, mounted on card	75
Do., 10x12	1 00
Do., 11x14	1 25

On enlargement orders if in our opinion, the enlargement will be improved by double mounting, we will do so at an additional charge of 10 cents, or triple mounted at 15 cents.

NOTE—Prices subject to change without notice.

ROCHESTER OPTICAL DEPARTMENT,
EASTMAN KODAK CO.,
ROCHESTER, N. Y.

PIN TO A CARD AND TOUCH
WITH A MATCH

That's all there is to using

EASTMAN FLASH SHEETS

They burn more slowly than ordinary flash powders, giving a softer light and consequently a more natural expression to the eyes. Clean, convenient, a minimum of smoke.



Price per package of Half Dozen sheets

No. 1,	\$.35
No. 2,56
No. 3,84
<i>Kodak Flash Sheet Holder,</i>	<i>1.00</i>

Note: Prices subject to change without notice.

EASTMAN KODAK CO.
ROCHESTER, N. Y.

For Sale at all Dealers!

46

Make Enlargements From Your
Best Premo Negatives

Brownie Enlarging Cameras

are as easy to operate
as the Premo Cameras
and they make splendid
Enlargements too



Brownie Enlarging Camera No. 3

Makes 5x8 $\frac{1}{2}$ Enlargements
From 2 $\frac{1}{2}$ x 4 $\frac{1}{4}$ Negatives

Price \$4.27

Note: Price subject to change without notice

This document may be printed and copied for private use.

This document may not be sold or resold, neither in hardcopy nor as softcopy on a medium such as CD-ROM, DVD or other.

For any questions regarding this document, please contact Mischa Koning at www.3106.net.